



Hydro Innovations
1924 Highway 95 North
Bastrop, Texas 78602



Resistat

WATER TEMPERATURE CONTROLLER

INSTALLATION INSTRUCTIONS

IMPORTANT SAFETY INFORMATION • DO NOT DISCARD



STEP 1

Open box and verify all parts are present. You should have the resistat controller, a mounting screw, and instructions. **If any parts are missing please contact Hydro Innovations at 512-321-7575.**

Step 2

Set temperature value.

(Note: Controller has a 2 degree differential.)



Step 3

Plug into 120VAC outlet. Place temperature probe in desired reservoir. Connect water valve plug into the front panel of controller.

WARNING:

Do Not Submerge this Unit in Water, or it will break and be a non-warranty issue.

The Water-Cooling Experts
www.hydroinnovations.com